


Note


Steering wheel not be removed for removal of combination switch.

Removal

- 1 Remove rubber sleeve on combination switch.
- 2 Unscrew fastening screws (1).

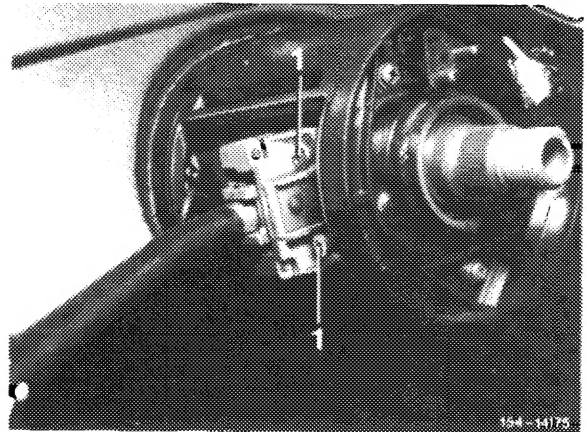

- 3 Slightly pull out combination switch, loosen screws (1) for cable connection of twin carbon contacts and pull out cable (2).
- 4 Remove cover under instrument panel left.

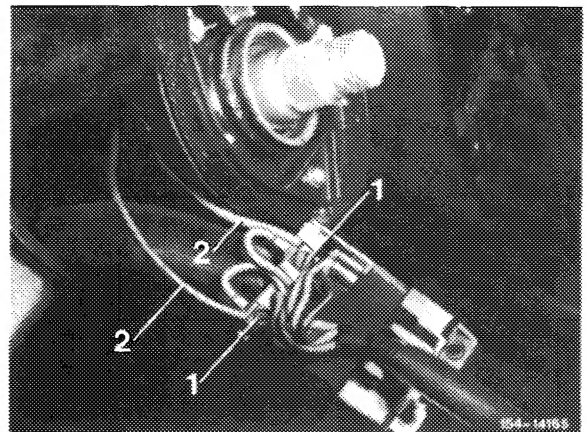

- 5 Pull off 14-point plug (arrow) and remove combination switch.

Installation

- 6 For installation proceed vice versa.

